
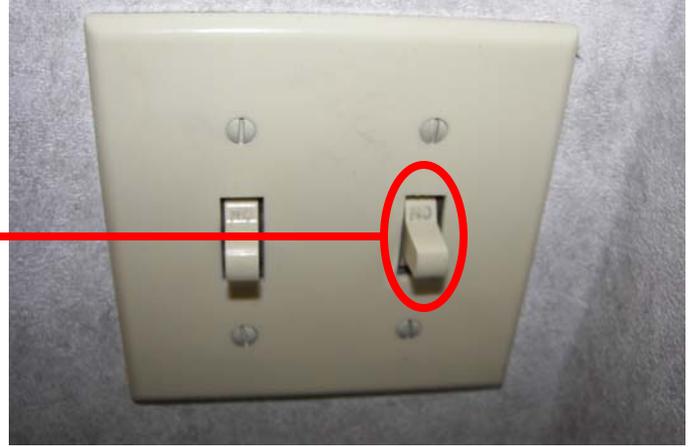


502 CLASSROOM EQUIPMENT INSTRUCTIONS

I. LOWER THE PROJECTOR SCREEN & TURN ON THE DATA PROJECTOR

The switch to lower or raise the screen is located on the corner of the front wall of the classroom, to the far right of the whiteboard.

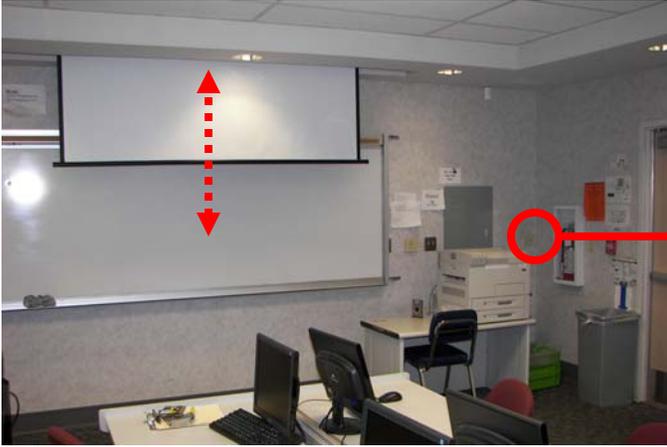


Point this remote at the projector hanging from the ceiling and press the “ON” button. You should hear the fan come on. It will take a minute or two for the unit to warm up.

II. CHOOSE ONE OF THE FOLLOWING ACTIONS:

A. SHOW A DVD OR VHS:

Insert a disc or tape into the DVD/VCR. The remote operates similarly to one from a home DVD/VHS unit.

Point this remote at the projector on the ceiling and press the "INPUT 3" button.

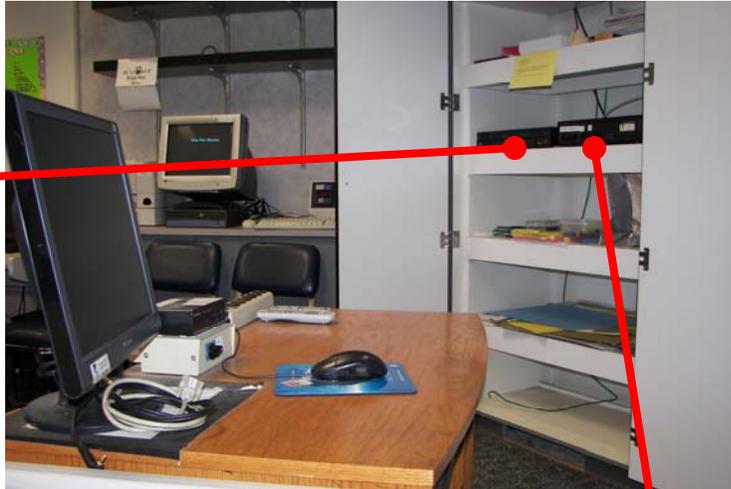

Turn on the audio amplifier unit located in the closet - the orange light will glow.



Adjust these knobs on the amplifier to suit your needs.


B. SHOW THE SCREEN IMAGE & PLAY SOUND FROM THE PC



Point this remote at the projector on the ceiling and press the "INPUT 1" button.



Press the button labeled "PC" on the audio selector box.

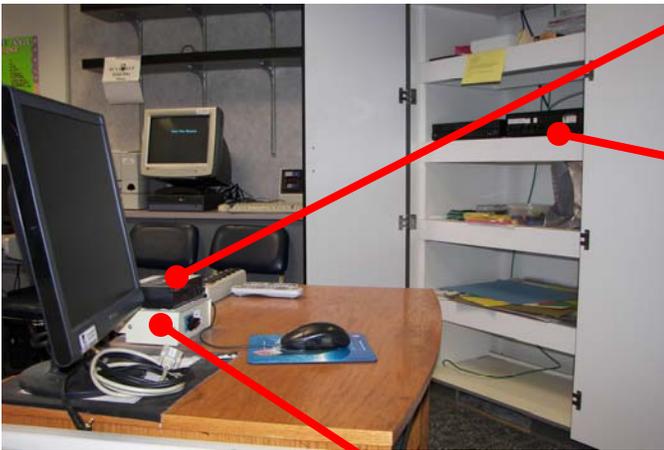

Turn on the audio amplifier unit - the orange light will glow.



Adjust these knobs on the amplifier to suit your needs.



Switch the video selector box to "PC."

C. SHOW THE SCREEN IMAGE & PLAY SOUND FROM A LAPTOP



Point this remote at the projector on the ceiling and press the "INPUT 1" button.



Press the button labeled "LAPTOP" on the audio selector box.

Switch the video selector box to "LAPTOP."



Attach these two loose cables to the laptop video and audio outputs.




Turn on the audio amplifier unit - the orange light will glow.



Adjust these knobs on the amplifier to suit your needs.



III. RETURN THE SCREEN TO THE FULLY RAISED POSITION.

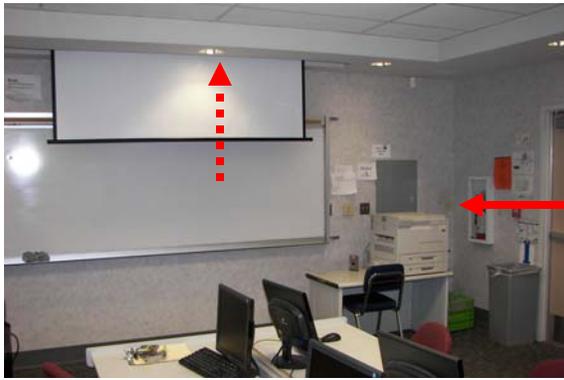

IV. TURN OFF THE DATA PROJECTOR.

Press the “**Standby**” or “**Power**” button on the projector remote two times.



You will see the bulb shut off and the status light will change from green to red when the unit cools down.



V. TURN OFF THE AUDIO AMPLIFIER.



The orange light will turn off.

